


# XDX SHMM

Mounting kit to install a surface mount kit XDX SH or XDX SHE to a door mullion.

## Mounting

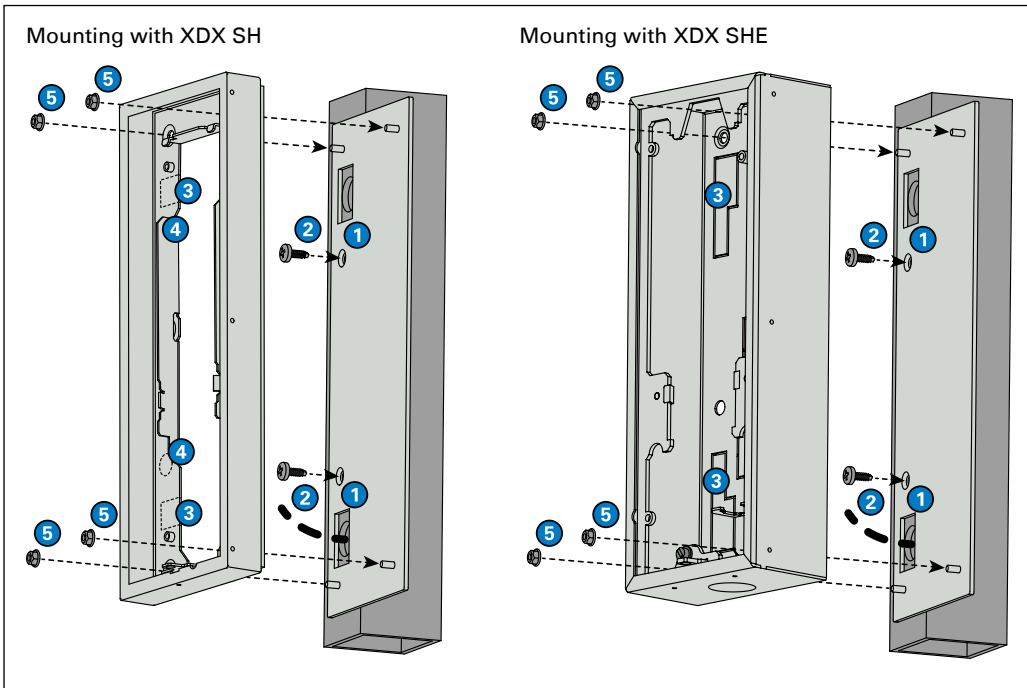

- 1 Drill two mounting holes in the door mullion (see "Dimensions"). A borehole with a diameter of 3.5 mm is required for the supplied self-tapping screws. Prepare a hole for the cable gland.
- 2 Mount the mounting plate on the door mullion using two self-tapping screws so that the mounting bolts face away from the door mullion. Guide the cable through the opening. The mounting kit is symmetrical and can be installed with the openings on the left or right. It is recommended to seal the mounting plate to the door mullion.
- 3 Depending on the mounting side, break out the provided cable openings.
- 4 (Mounting with XDX SHE only) Depending on the mounting side, break out the mounting holes.
- 5 Mount the surface mount box XDX SH or XDX SHE on the mounting plate using the four nuts.

## Recommended mounting height and position


- Mount the upper edge of the Intercom station approx. 1,650 mm (65 in) from the finished floor. Adapt the mounting height to the individual needs.
- For a barrier-free accessibility, it is recommended to mount the Intercom station with enough space to walls or corners.
- When mounting the Intercom station, pay attention to the correct camera angle in terms of accessibility, so that wheelchair users and children can be detected by the camera (see data sheet of the Intercom station).

## Mounting instructions

- This kit shall be installed by trained and qualified personnel only.
- Only use recommended tools when installing this kit.
- Do not install this kit on unstable walls or on surfaces which cannot support the weight of the device.
- Make sure this kit is not subject to torsional forces (e.g. on uneven walls).
- Install the Intercom station with a distance of min. 150 mm (6 in) downwards to enable access to the locking screws (Tx08) of the Intercom station.
- The door mullion width must be min. 25 mm (1 in) for the installation of the mounting kit.

## Dimensions

Measuring units in mm (in), not to scale!

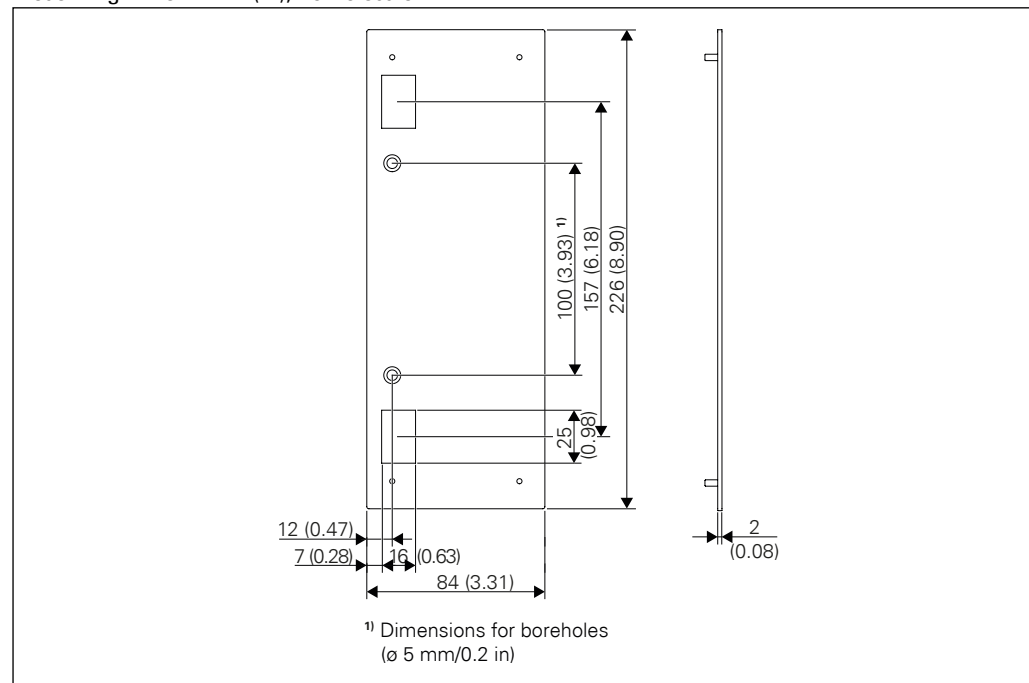

## Extent of supply

- Mounting plate
- 4 self-tapping screws (ø 3.5 mm/0.14 in; Phillips recessed head)
- 6 nuts (SW 5.5 mm/0.22 in)
- Short reference

## Required tools

- Phillips screwdriver (PHD3)
- Nut driver (SW 5.5 mm/0.22 in)

## Manufacturer's reference


For technical specifications, see the respective data sheet.  
For the latest software and documentation, visit: [www.commend.com](http://www.commend.com)  
Keep this description in safe custody.



# XDX SHMM

Montagekit für die Montage eines Aufputzkits XDX SH oder XDX SHE an einen Türpfosten.

## Montage

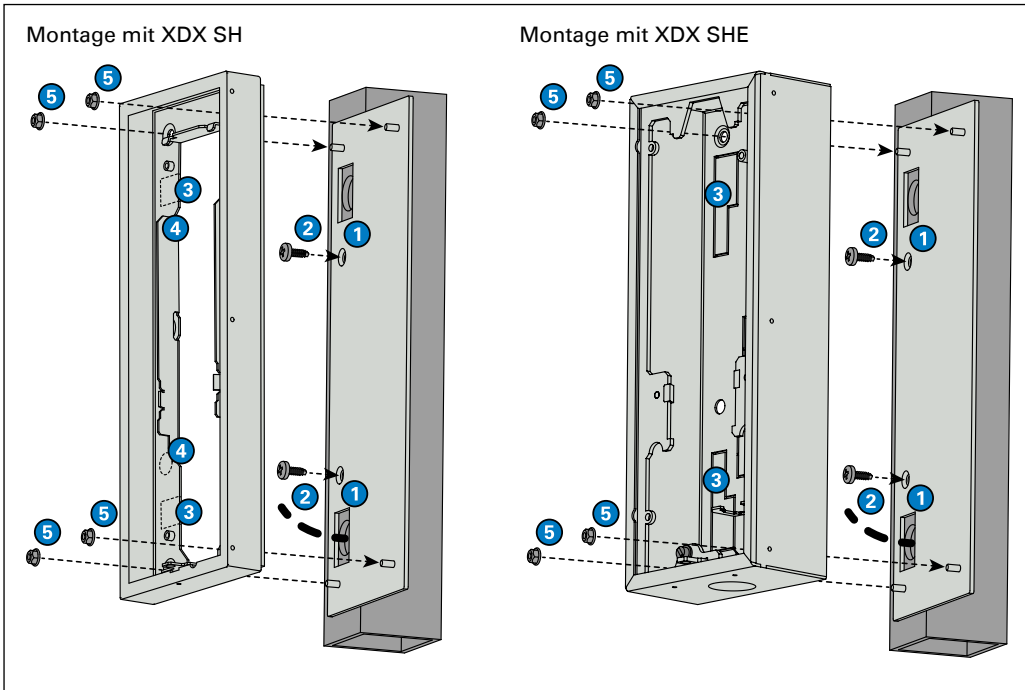

- 1 Zwei Montagelöcher in den Türpfosten bohren (siehe „Abmessungen“). Für die mitgelieferten Blechschrauben werden zwei Bohrungen mit einem Durchmesser von 3,5 mm benötigt. Ein Loch für die Kabeldurchführung vorbereiten.
- 2 Die Montageplatte mithilfe von zwei Blechschrauben so am Türpfosten befestigen, dass die Montagebolzen vom Türpfosten wegschauen. Das Kabel durch die Öffnung führen. Das Montagekit ist symmetrisch und kann mit den Öffnungen links oder rechts installiert werden. Es wird empfohlen, die Montageplatte zum Türpfosten abzudichten.
- 3 Abhängig von der Montageseite die dafür vorgesehenen Kabelöffnungen ausbrechen.
- 4 (Nur bei Montage mit XDX SH) Abhängig von der Montageseite die Montagelöcher ausbrechen.
- 5 Die Aufputzdose XDX SH oder XDX SHE mithilfe der vier Muttern an der Montageplatte befestigen.

## Empfohlene Montagehöhe und Position


- Montieren Sie die obere Kante der Sprechstelle ca. 1.650 mm über der fertigen Fußbodenoberfläche. Passen Sie die Montagehöhe ggf. an die jeweiligen Erfordernisse an.
- Für eine barrierefreie Erreichbarkeit sollten Bedienelemente mit genügend Abstand von Gebäudeecken und -kanten montiert werden.
- Beachten Sie beim Montieren der Sprechstelle den Kamerawinkel im Sinne der Barrierefreiheit, sodass Rollstuhlfahrer und Kinder von der Kamera erkannt werden können (siehe Datenblatt der Sprechstelle).

## Montagehinweise

- Dieses Kit darf nur von ausgebildetem Fachpersonal installiert werden.
- Verwenden Sie für die Installation nur die dafür vorgesehenen Werkzeuge.
- Montieren Sie dieses Kit nicht auf instabilen Wänden oder auf Oberflächen, die das Gewicht des Geräts nicht tragen können.
- Achten Sie auf eine verzugsfreie Montage des Kits (z. B. an unebenen Wänden).
- Installieren Sie die Sprechstelle mit einem Abstand von min. 150 mm nach unten, um einen Zugang zu den Verriegelungsschrauben (Tx08) der Sprechstelle zu ermöglichen.
- Der Türpfosten muss für die Montage des Montagekits min. 25 mm breit sein.

## Abmessungen

Maße in mm, kein Maßstab!

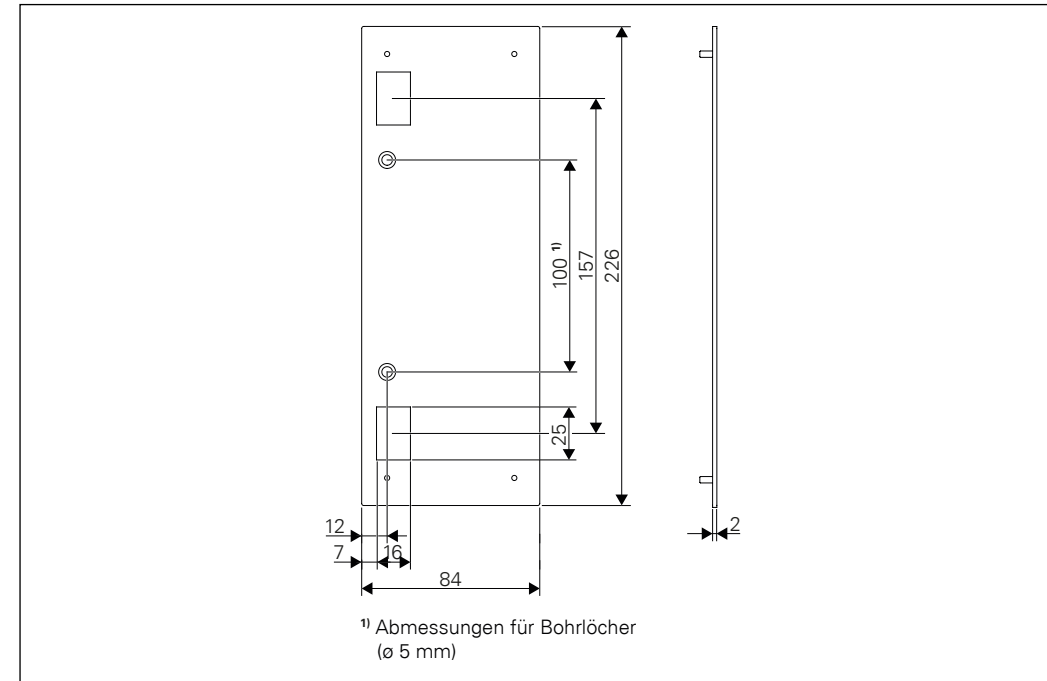

## Lieferumfang

- Montageplatte
- 4 Blechschrauben (ø 3,5 mm; Philips-Kreuzschlitz)
- 6 Muttern (SW 5,5 mm)
- Beipackzettel

## Benötigtes Werkzeug

- Kreuzschlitzschraubendreher (PHD3)
- Steckschlüssel (SW 5,5 mm/0,22 in)

## Hinweis des Herstellers

Technische Spezifikationen sind im entsprechenden Datenblatt zu finden. Die aktuellste Software und Dokumentation finden Sie unter: [www.commend.com](http://www.commend.com). Bewahren Sie diese Beschreibung sorgfältig auf.

