


# ID8 FB

Gypsum wall/panel mount kit for a control desk of the id8 series.

## Mounting

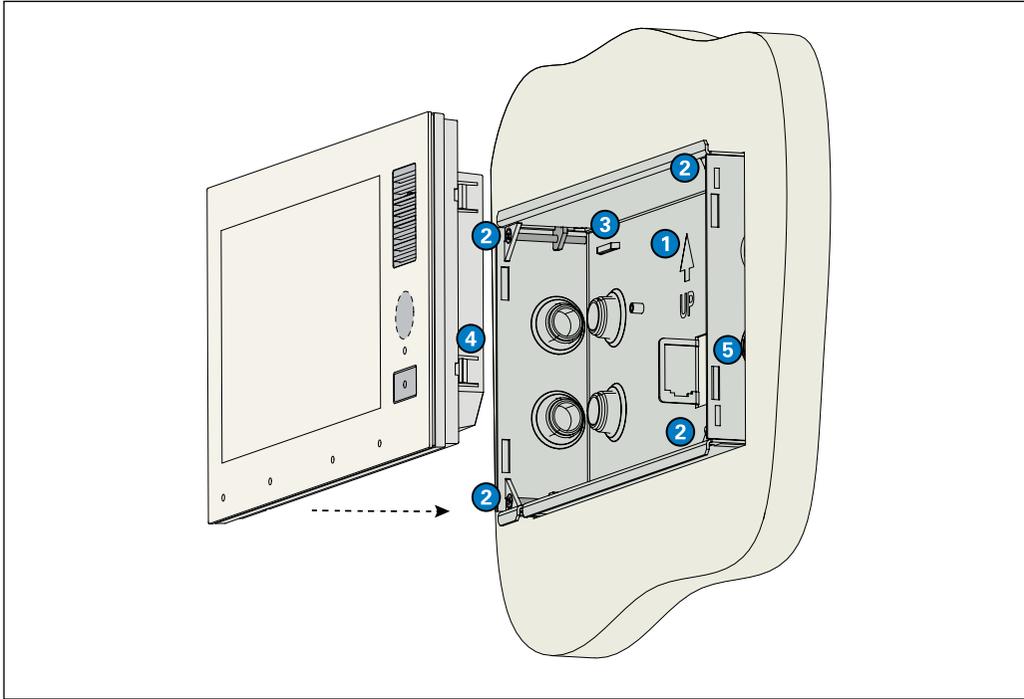

- 1 Make sure the arrow on the mounting frame point upwards.
- 2 Install the mounting box to the wall as shown at "Dimensions". Press the 4 claw clamps on the sides of the mounting box outwards and tighten them using the corresponding screws (TX10).  
*(Optional)* Mount the audio induction loop kit AFIL-USB on the mounting points (see short reference "AFIL-USB").  
*(Optional)* Mount the various accessories (e.g. EB3E2A-AUD) on the mounting points (see corresponding reference).
- 3 *(Optional)* Place the CAT. crimp jack MODJ8-8KUPPL in the sheet metal flap and fixate using cable ties. Mount the CAT. crimp jack onto the open end of a CAT. cable.
- 3 Connect the required cables (Ethernet and USB or I/O cables, if needed). Fixate the cables to the sheet metal bridges 3 using cable ties, if needed.
- 4 Insert the device into the mounting box and press until the 4 locking latches on the right and left side of the device lock in.


To unmount the device, push firmly onto the locking latches 5 and gently remove the device. If necessary, use a tool (i.e. a screwdriver) to push the locking latches in.

## Recommended mounting height and position

- Mount the upper edge of the device approx. 1,650 mm (65 in) from the finished floor. Adapt the mounting height to the individual needs.
- For a barrier-free accessibility, it is recommended to mount the device with enough space to walls or corners.
- When mounting the device, pay attention to the correct camera angle in terms of accessibility, so that wheelchair users and children can be detected by the camera:  
62° (vertical) × 78° (horizontal)

## Dimensions

Measuring units in mm (in), not to scale!

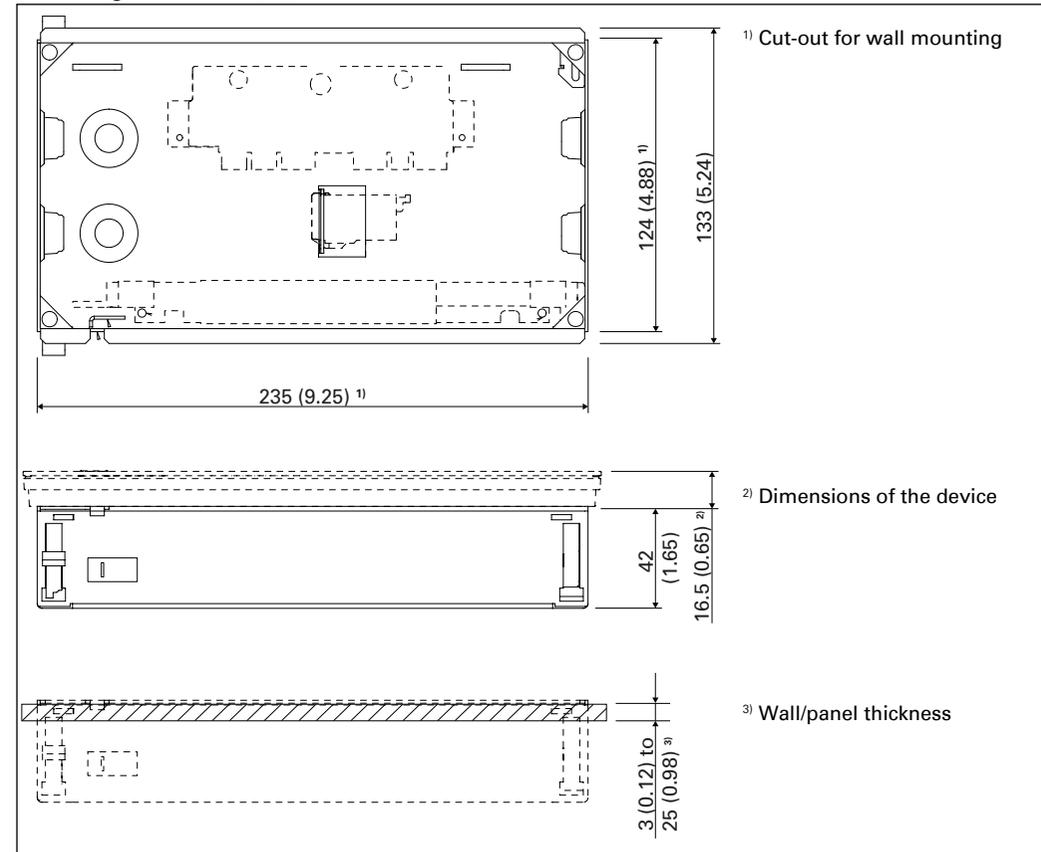

## Extent of supply

- Mount kit
- 4 cable ties
- Short reference

## Required tools:

- Torx wrench (TX10)

## Mounting instructions

- This kit shall be installed by trained and qualified personnel only.
- Only use recommended tools when installing this kit.
- Do not install this kit on unstable walls or on surfaces which cannot support the weight of the device.
- Protect the mounting box during plaster work by using the supplied signal cover.
- No water may penetrate into the mounting box. Therefore, make sure the mounting box is waterproof.
- It is recommended to mount the optional CAT. crimp jack MODJ8-8KUPPL onto the open end of a CAT. cable within a flush mount box.

## Manufacturer's reference


For technical specifications, see the respective data sheet.  
For the latest software and documentation, visit: [www.commend.com](http://www.commend.com)  
Keep this description in safe custody.



# ID8 FB

Gipswand-/Panel-Montagekit für einen Leitstand der Serie id8.

## Montage

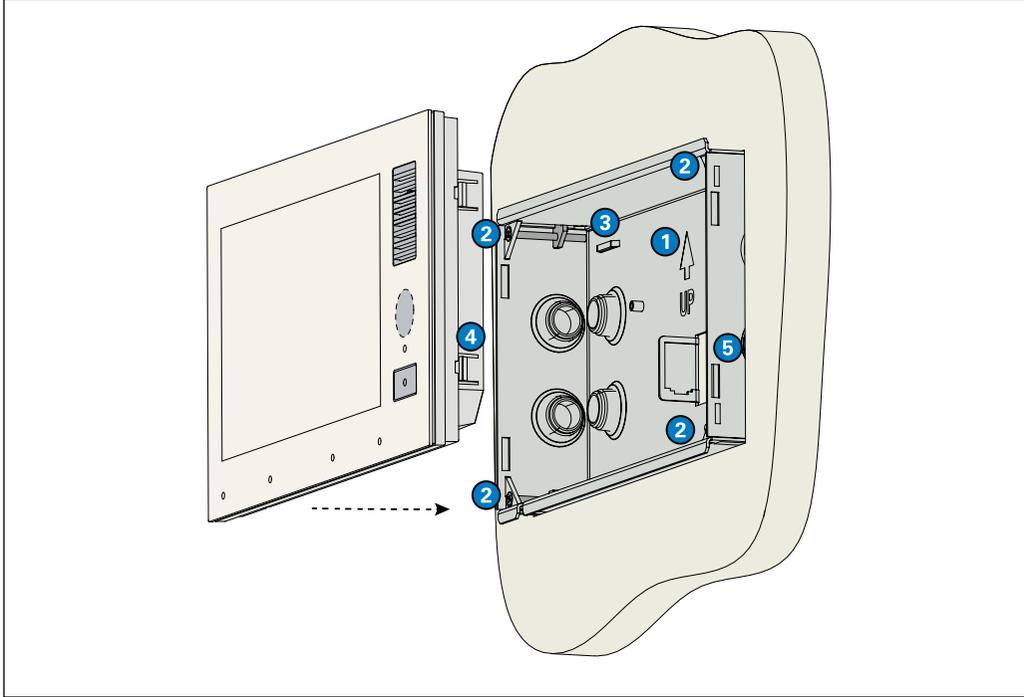

- 1 Prüfen, ob der Pfeil am Montagerahmen nach oben zeigen.
- 2 Die Montagedosse wie unter „Abmessungen“ dargestellt an der Wand montieren. Die 4 Krallenklammern seitlich an der Montagedosse nach außen drücken und über die dazugehörigen Schrauben festziehen (TX10).  
*(Optional)* Das Audio-Induktionsschleifenkit AFIL-USB an den Montagepunkten montieren (siehe Beipackzettel „AFIL-USB“).  
*(Optional)* Das verschiedene Zubehör (z. B. EB3E2A-AUD) an den Montagepunkten montieren (siehe entsprechenden Beipackzettel).  
*(Optional)* Die CAT-Crimp-Buchse MODJ8-8KUPPL in der Blechlasche platzieren und mit Kabelbindern fixieren. Die CAT-Crimp-Buchse an das offene Ende des CAT-Kabels montieren.
- 3 Die benötigten Kabel anschließen (Ethernet- und ggf. USB- oder I/O-Kabel). Die Kabel mit Kabelbindern an den Blechbrücken 4 fixieren, wenn benötigt.
- 4 Das Gerät in die Montagedosse einsetzen und drücken, bis die 4 Einrastschnapper auf der linken und rechten Seite des Geräts einrasten.


Zur Demontage des Geräts die Einrastschnapper 5 fest drücken und das Gerät entfernen. Gegebenenfalls ein Werkzeug (z. B. Schraubendreher) verwenden, um die Einrastschnapper hineinzudrücken.

## Empfohlene Montagehöhe und Position

- Montieren Sie die obere Kante des Geräts ca. 1.650 mm über der fertigen Fußbodenoberfläche. Passen Sie die Montagehöhe an die jeweiligen Erfordernisse an.
- Für eine barrierefreie Erreichbarkeit sollten Bedienelemente mit genügend Abstand von Gebäudeecken und -kanten montiert werden.
- Beachten Sie beim Montieren des Geräts den Kamerawinkel im Sinne der Barrierefreiheit, sodass Rollstuhlfahrer und Kinder von der Kamera erkannt werden können: 62° (vertikal) × 78° (horizontal)

## Abmessungen

Maße in mm, kein Maßstab!

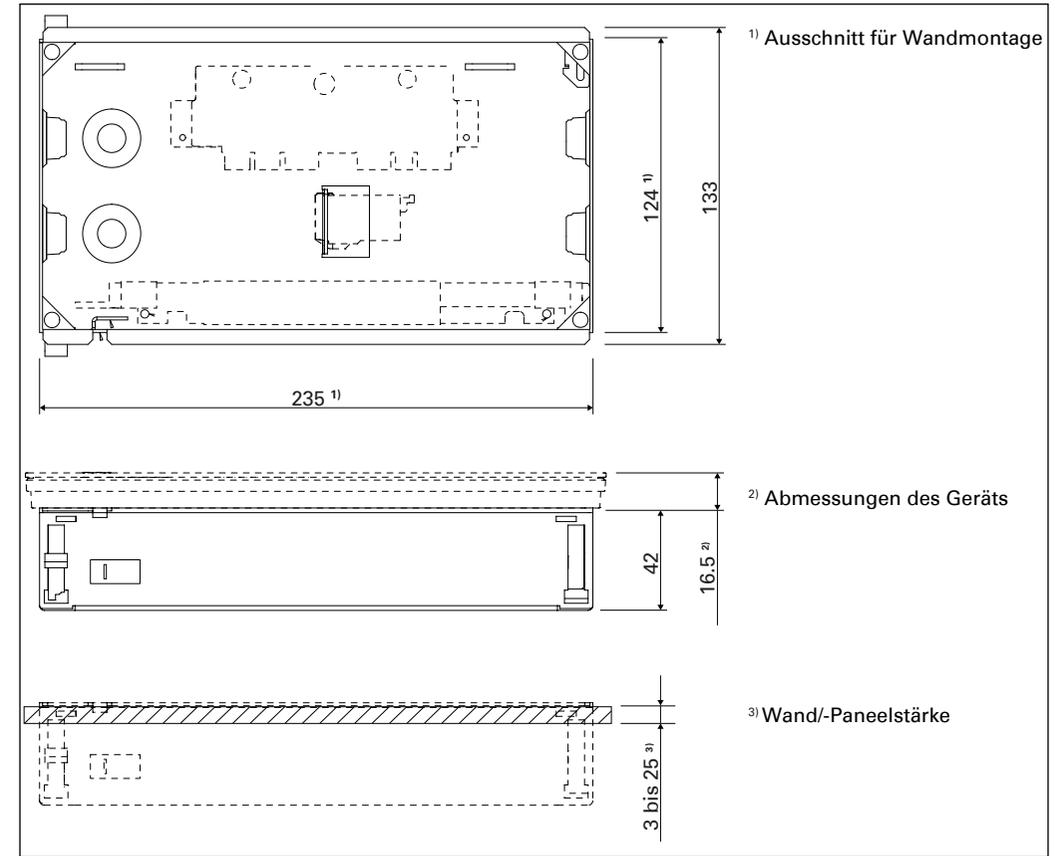

## Lieferumfang

- Montagekit
- 4 Kabelbinder
- Beipackzettel

## Benötigtes Werkzeug

- Torxschlüssel (TX10)

## Montagehinweise

- Dieses Kit darf nur von ausgebildetem Fachpersonal installiert werden.
- Verwenden Sie für die Installation nur die dafür vorgesehenen Werkzeuge.
- Montieren Sie dieses Kit nicht auf instabilen Wänden oder auf Oberflächen, die das Gewicht des Geräts nicht tragen können.
- Schützen Sie die Montagedosse beim Verputzen, indem Sie den beiliegenden Putzdeckel verwenden.
- Es darf kein Wasser in die Montagedosse eindringen. Sorgen Sie deshalb ggf. für eine bauliche Abdichtung der Montagedosse.
- Es wird empfohlen, innerhalb einer Unterputzdose die optionale CAT-Crimp-Buchse MODJ8-8KUPPL an das offene Ende des CAT-Kabels zu montieren.

## Hinweis des Herstellers

Technische Spezifikationen sind im entsprechenden Datenblatt zu finden. Die aktuellste Software und Dokumentation finden Sie unter: [www.commend.com](http://www.commend.com)  
Bewahren Sie diese Beschreibung sorgfältig auf.

